

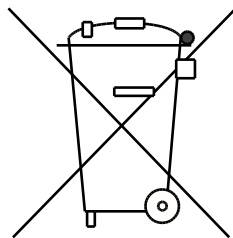


Quick guide for Dantherm HPT 1 PC tool

Rev. 1.0

en

Dantherm[®]
CONTROL YOUR CLIMATE



Der tages forbehold for trykfejl og ændringer

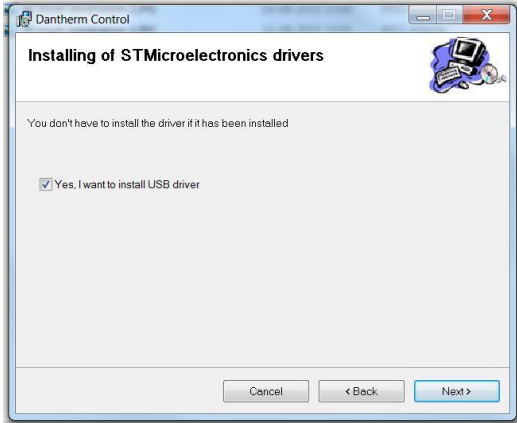
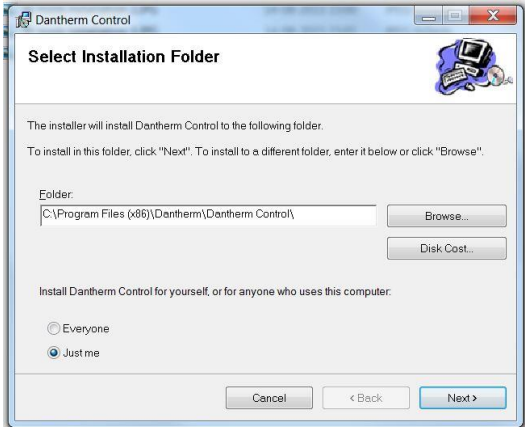
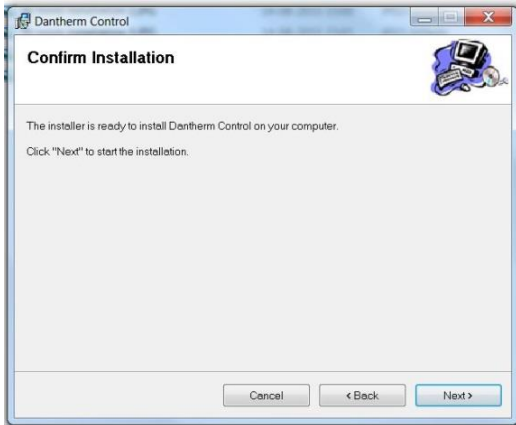
Dantherm can accept no responsibility for possible errors and changes

Irrtümer und Änderungen vorbehalten

Dantherm n'assume aucune responsabilité pour erreurs et modifications éventuelles

Quick guide for Dantherm HPT 1 PC tool, *continued*

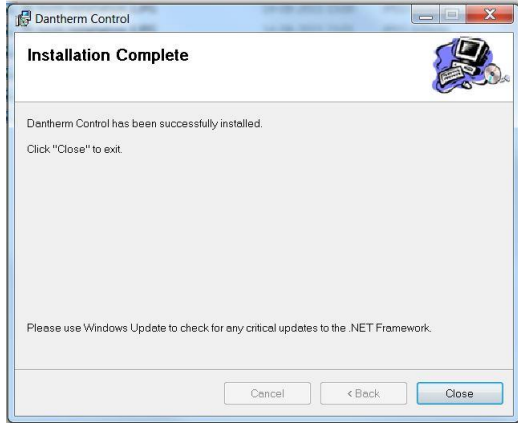
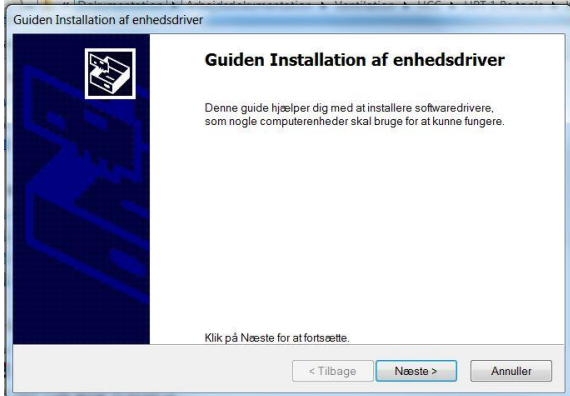
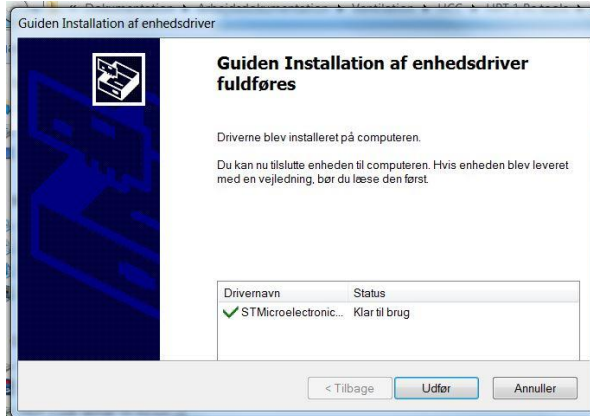
Installation

Step	Action
4	<p>Result:</p>  <p>Click next</p>
5	 <p>Choose the folder you want to install PC tools in and click next.</p>
6	 <p>Click next and the installation will start</p>

Continued overleaf

Quick guide for Dantherm HPT 1 PC tool, *continued*

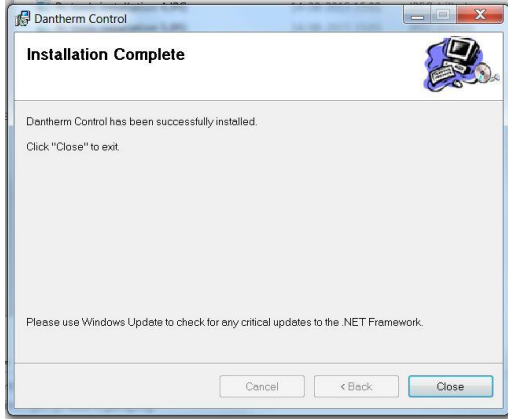

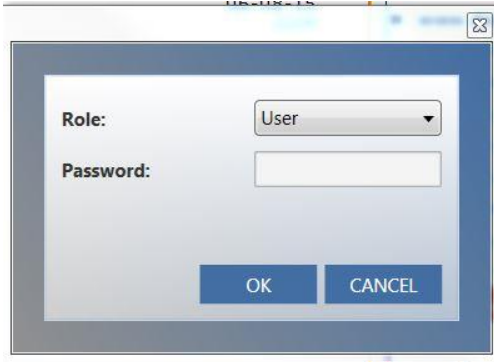
Installation

Step	Action				
7	<p>After a short while the installation is completed and the following picture appears. Click on Close.</p> 				
8					
9	 <table border="1"> <thead> <tr> <th>Drivernavn</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>✓ STMicroelectronic...</td> <td>Klar til brug</td> </tr> </tbody> </table>	Drivernavn	Status	✓ STMicroelectronic...	Klar til brug
Drivernavn	Status				
✓ STMicroelectronic...	Klar til brug				

Continued overleaf

Quick guide for Dantherm HPT 1 PC tool, *continued*


Installation

Step	Action
10	
11	<p>Connect the unit to the computer with the enclosed cable. Now the program is ready for use:</p>  <p>When PC tool has recognized a ventilation unit the S/N of the unit will appear on the screen, in this example “1508041370590”</p>
12	 <ul style="list-style-type: none"> • Select “User” – no Password required • Select “Installer” Password is 1234 • “Administrator” cannot be selected

Continued overleaf

Quick guide for Dantherm HPT 1 PC tool, *continued*

Installation

Step	Action
13	 <p>Now PC tools is activated and you can start using it.</p>

